

## General information

### Catalog number explanation

**T3 S 080 T W - 4 xxx**

● **Accessories** (added in alpha-numeric order) <sup>①</sup>

**A** = Auxiliary Switch  
**S\_** = Shunt trip with voltage code  
**U\_** = Undervoltage release with voltage code

● **Number of poles**

-1 = 1 pole (T1 only)  
 -2 = 2 pole  
 -4 = 4 pole  
**None** = 3 pole

● **Type connectors**

**W** = None  
**L** = Lugs included

● **Trip unit function**

**B** = LS/I (AC only)  
**D** = Molded Case Switch (MCS)  
**T** = Thermal-magnetic  
**M** = Magnetic only (MCP)  
**E5** = Electronic MCP (AC only)  
**C** = LSI (AC only)  
**E** = LSIG (AC only)

● **Current rating**

**015** = 15A  
**080** = 80A  
**100** = 100A  
**225** = 225A  
**250** = 250A  
**400** = 400A  
**600** = 600A  
**800** = 800A  
**1200** = 1200A

● **Interrupting rating class**

**B** = Basic  
**N** = Normal  
**S** = Standard  
**H** = High  
**L** = Extra High  
**V** = Very high

● **Frame size**

**T1** = 100A  
**T2** = 100A  
**T3** = 225A  
**Ts3** = 225A  
**T4** = 250A  
**T5** = 400A, 600A  
**T6** = 600A, 800A  
**T7** = 1000A, 1200A



① Consult ABB for factory installed accessories.